

ISAW BLADE INTER-CHANGEAB DOZUKI BACKSAW SERI

www.z-saw.co.jp/en



 













Impulse hardened teeth stay sharp much longer than conventional blades.



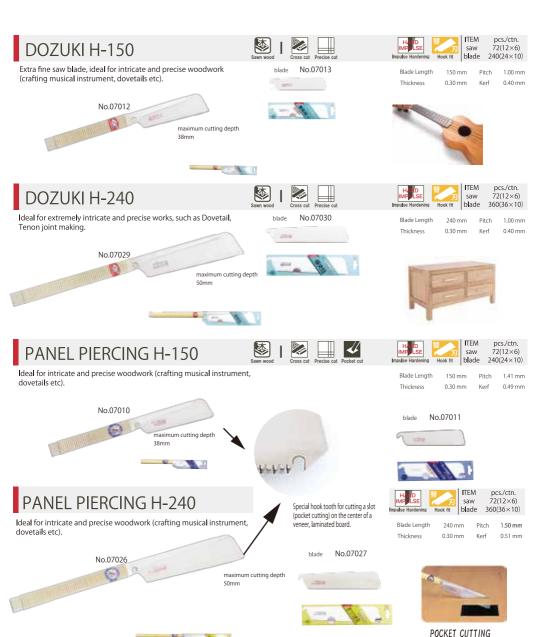



Since the saw teeth are very sharp, we recommend that you wear gloves or wrap the blade with something (a cloth or towel or its cardboard sleeve) when replacing the blade



 




Detachment



Hook the blade into the spine. Tap the spine on a small block of scrap timber to attach the blade.





Caution: